



Shenzhen Jimi lot JM-LG05 Asset GPS Terminal User Manual

[Home](#) » [Shenzhen Jimi lot](#) » Shenzhen Jimi lot JM-LG05 Asset GPS Terminal User Manual 




SHENZHEN

FCC ID:2AMLFJM-LG05
JM-LG05
ASSET GPS TERMINAL User Manual V1.0

Contents

- [1 Product overview](#)
- [2 Package & Accessories](#)
- [3 Specification](#)
- [4 Product setup](#)
- [5 LED indications](#)
- [6 SMS configuration](#)
- [7 Common SMS setting command](#)
- [8 Troubleshooting](#)
- [9 Warranty instructions](#)
- [10 Maintenance Record](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

Product overview

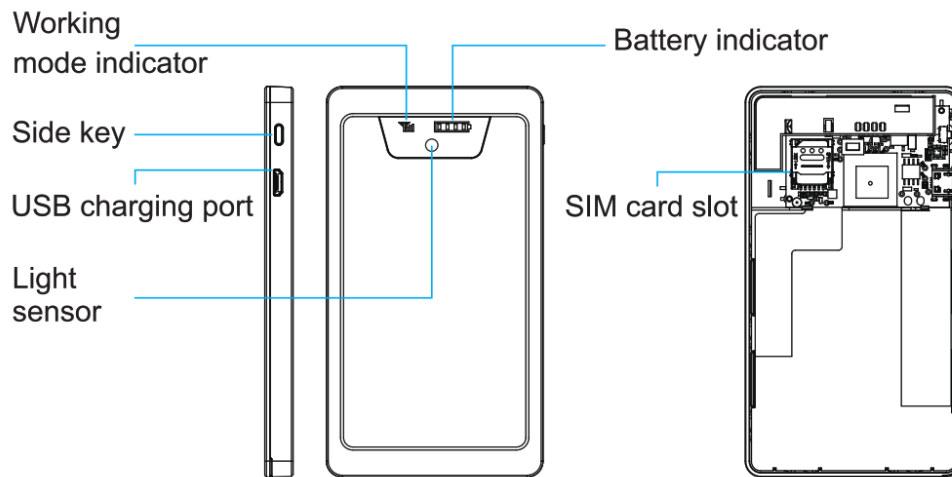

- GPS & LBS positioning (optional)
- Real-time location query
- Unpacking alert
- Geo-fence alert
- Internal 2,500 mAh rechargeable battery
- Real-time tracking mode
- Power saving mode




Package & Accessories

- Standard package
- JM-LGO5 device
- USB cable
- Charger

Specification

GSM Band	850/900/1800/1900MHz
Antenna	Internal GSM quad-band antenna; GPS ceramic antenna
LED Indicators	Battery, working mode
Dimensions	110(L)*61(W)*8(H)mm
Weight	76g
Backup Battery	Li-Polymer; 2,500 mAh
Working voltage/current	3.7 VDC/50mA
Charger	5V/1A charger
Charging time	6 hours
Transmit Protocol	TCP

Product setup

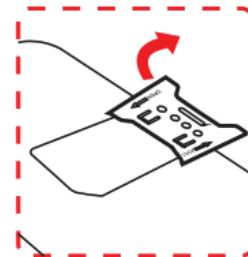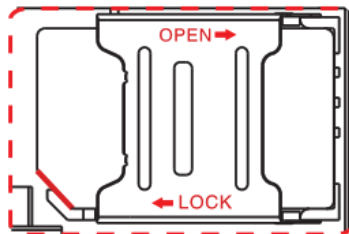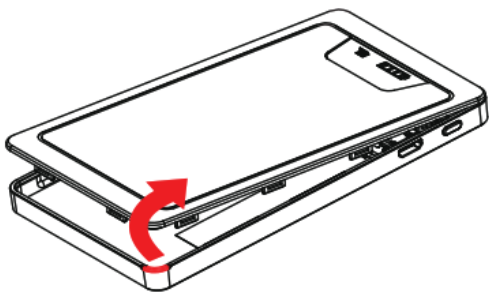

Insert SIM

1. Find the notch and remove the cover.
2. Insert the Nano SIM card into the card slot.

Power on and off

Momentarily press the side key 5 times to power on or off the device.

Charging

Connect the charger to the Micro USB interface to charge. If the device is fully charged, the power and battery LED indicator will be OFF.

LED indications

Battery and Power Status (green)

Behavior	Meaning
1 LED lights up	0-25% remaining battery
2 LEDs light up	25%-50% remaining battery
3 LEDs light up	50%-75% remaining battery
4 LEDs light up	75%-100% remaining battery
Off	Normal working; No side key pressed No battery; Internal error; Sleep

Working Mode (red and blue)

Solid blue	Real-time tracking mode (mode 1)
Solid red	Power saving mode (mode 2)
Off	Normal working; No side key pressed; No battery; Internal error. Sleep

Note

Momentarily press the side key twice to enable the LED and check the current working model

SMS configuration

Tracked by mobile phone

Send the command URL# by SMS to the device's SIM card number.

The device will reply with a map link.

Click the link to have the location displayed on Google Maps on your mobile phone.

If the device is somewhere not positioned, the device will reply "Positioning, please wait for a moment" or "Positioning fails".

Monitored by tracking platform

APN & Server setting

To ensure normal network operation, please confirm your APN and server settings before you log in. In most countries, APNs could be automatically adapted to local mobile operators. If not, please send SMS to set the APN. If user name and password are required for APN, please add it into the command.

APN,apnname#

E.g. APN,internet#

APN,apn name,user,pwd#

E.g. APN,internet,CLENTE,AMENA#

Confirm the server address and setting with distributors. If the server is incorrect, please send an SMS to change it.

SERVER,mode,domain name/IP,port,0#

E.g: SERVER,1, www.ydpat.com, 8011,0#

SERVER,O, 211.154.135.113.8011,0#

mode=1 means set with domain name

mode=0 means set with IP address

Please login the designated service platform and enjoy your monitoring experience.

Tracking mode setting

1. Real-time tracking mode

(Defaulted) MODE,1,T1,T2# T1: time interval to report position in movement; Range: 10-3600s. Default: 600s

T2: time interval to report position while vehicle is static , Range: 180-86400s. Default: 3600s.

2. Power saving mode

MODE,2,T1,T2#

T1: start time of sleeping period. The format is HH: MM.

T2: sleep time interval; Value: 1, 2, 3, 4, 6, 8, 12, 24, 72 (hours). Default: 24 hours

Internal battery low alert

Alert message will be sent to the preset SOS phone number when the voltage of the device's internal battery is lower than 3.65V.

To add SOS number: SOS,A,number1,number2,number3#

To delete the SOS number: SOS,D, phone number#

Query SOS number: SOS#

Unpacking alert

Once the light sensor detects light, the alert will be triggered and a message with a map link will be sent to the SOS phone number. The device will switch to real-time tracking mode.

Common SMS setting command

Command	Description	Remark
TATUS#	Check the device's status	
ERSION#	Check firmware version	
PRSET#	Check device network setting	
ODE#	Check current mode and parameters.	
EMAIL	Enable unpacking alert	A=ON/OFF; Default: ON M=0/1, alarm way. 0: GPRS; 1: SMS+GPRS; Default: 0
EMAIL FF#	Disable unpacking alert	
EMALM#	Check current parameters	
BATOM N, M#	Enable battery low alert	M=0/1, alarm way. 0: GPRS; 1: SMS+GPRS; Default: 1
ATOM, FF#	Disable battery low alert	

Troubleshooting

type	Use
Unable to connect to the tracking platform	Check the APN and IP settings. Check whether the data service of the SIM card is enabled. Check the balance of the SIM card.
Tracker shows offline	Check if the device entered the network blind area. Check the balance of the SIM card.
Unable to locate	Make sure the top side facing upward without metallic things shielded. Make sure it's not in an area with no satellite coverage.
Unable to boot	Check whether the battery is exhausted. Check whether the SIM card is inserted.
No command reply	Make sure the command format is correct. Make sure the SIM card is well inserted and has SMS service.

Warranty instructions

1. The warranty is valid only when the warranty card is properly completed and upon presentation of the proof of purchase consisting of the original invoice indicating the date of purchase, model and serial No. of the product. We reserve the right to refuse a warranty if this information has been removed or changed after the original purchase of the product from the dealer.
2. Our obligations are limited to repair of the defect or replacement the defective part or at its discretion replacement of the product itself.
3. Warranty repairs must be carried out by our Authorized Service Centre. Warranty cover will be void, even if a repair has been attempted by any unauthorized service centre.
4. Repair or replacement under the terms of this warranty does not provide right to extension or renewal of the warranty period.

5. The warranty is not applicable to cases other than defects in material, design and workmanship.

Maintenance Record

Date		Serviced by	
Product Model			
IMEI Number			
Fault Descriptions			
Comments			

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types JM-L005, GT420D, LG05 (FCC ID: 2AMLFJM-LG05) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.161W/kg. This device was tested for a typical body kept 10mm. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

Documents / Resources

	Shenzhen Jimi lot JM-LG05 Asset GPS Terminal [pdf] User Manual JM-LG05, JMLG05, 2AMLFJM-LG05, 2AMLFJMLG05, JM-LG05 Asset GPS Terminal, JM-LG05, Asset GPS Terminal
---	---